

Installation Guide For Style CRD5023BN

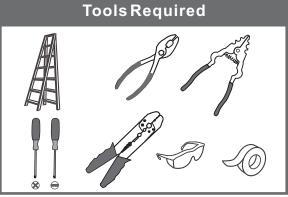

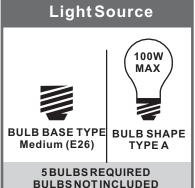


Option 1 (socket up): Fixture Height Adjustable 25" to 72"


Option 2 (socket down): Fixture Height Adjustable 29.5" to 76.5"

$oldsymbol{\Delta}$ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the

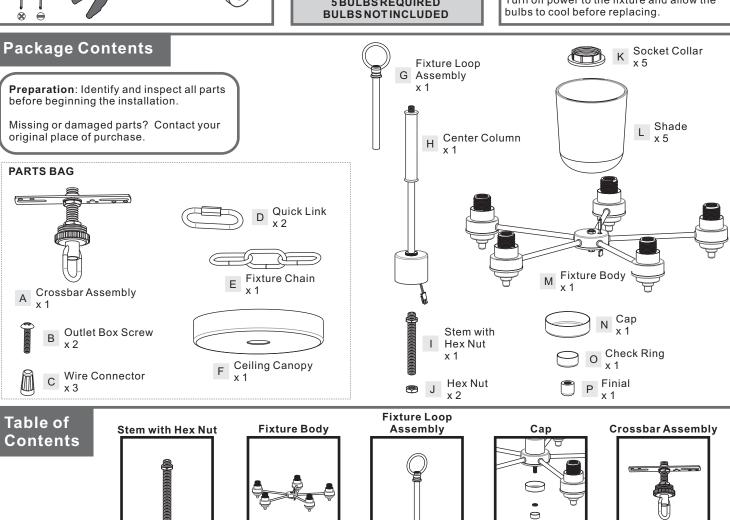


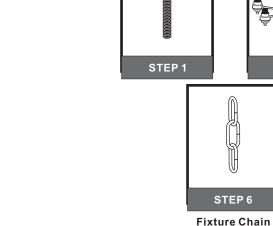

©2019 QuoizelInc.

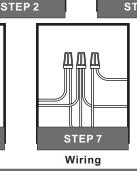

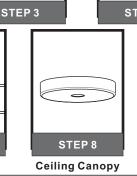


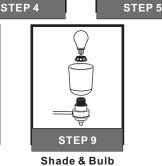

visit us on-line at www.quoizel.com


Released Date: 2019-07-27


STEP 1

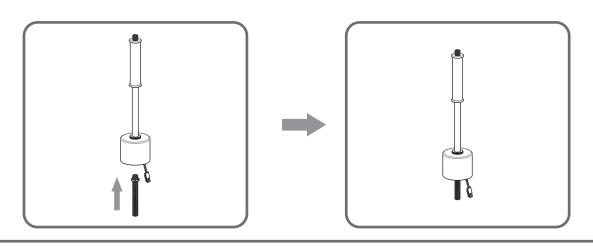


STEP 2


OPTION 1

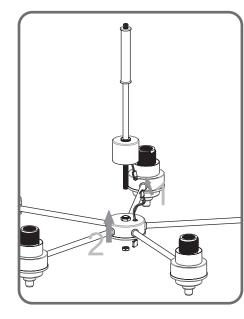

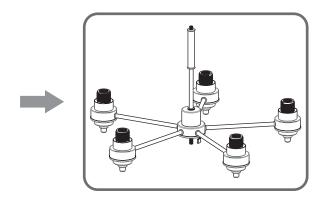

OPTION 2

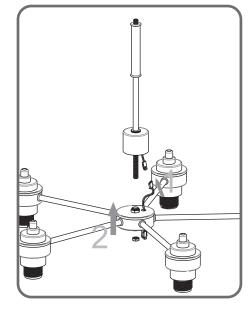

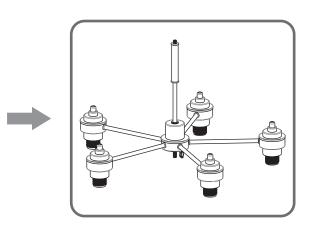


©2019 QuoizelInc.


visit us on-line at www.quoizel.com

Released Date: 2019-07-27




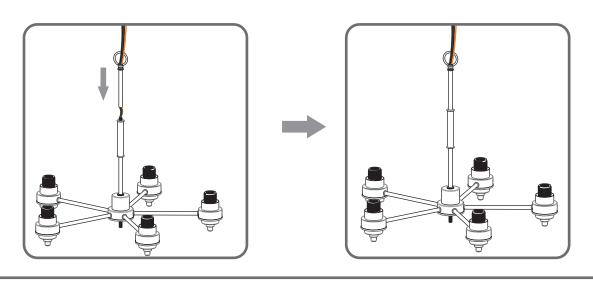

STEP 4

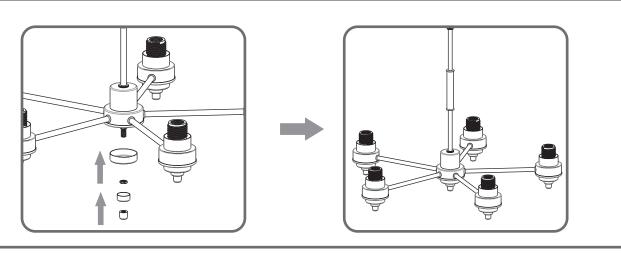



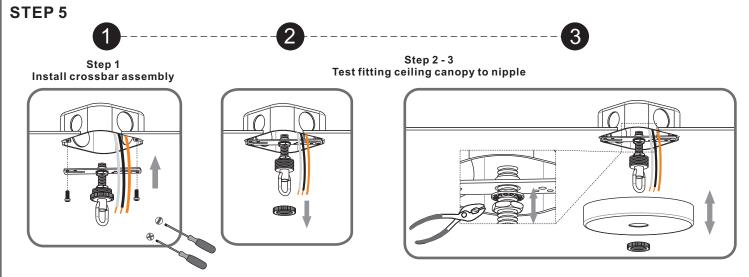






Step 1 Adjust fixture chain length




Step 2 - 3 Install Fixture Chain

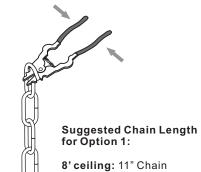


8' ceiling: 11" Chain 9' ceiling: 22" Chain 10' ceiling: 33" Chain

Suggested Chain Length for Option 2:

8' ceiling: 5.5" Chain 9' ceiling: 16.5" Chain 10' ceiling: 27.5" Chain

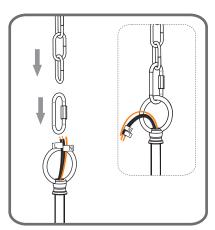


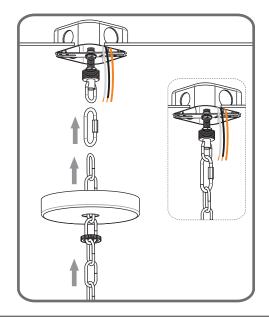






Step 1 Feed the fixture wires through the loop

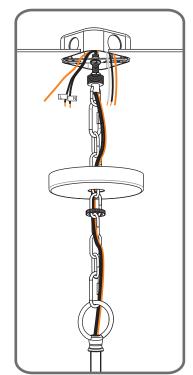

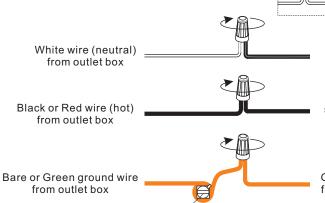

Supply wire from fixture ribbed side or identified with the Label "N"

supply wire from fixture smooth side or identified with the label "L"

Ground wire from Fixture

*Green Ground Screw on crossbar optional

STEP 8

