


ITEM NO: M50046ORB
M50046BK

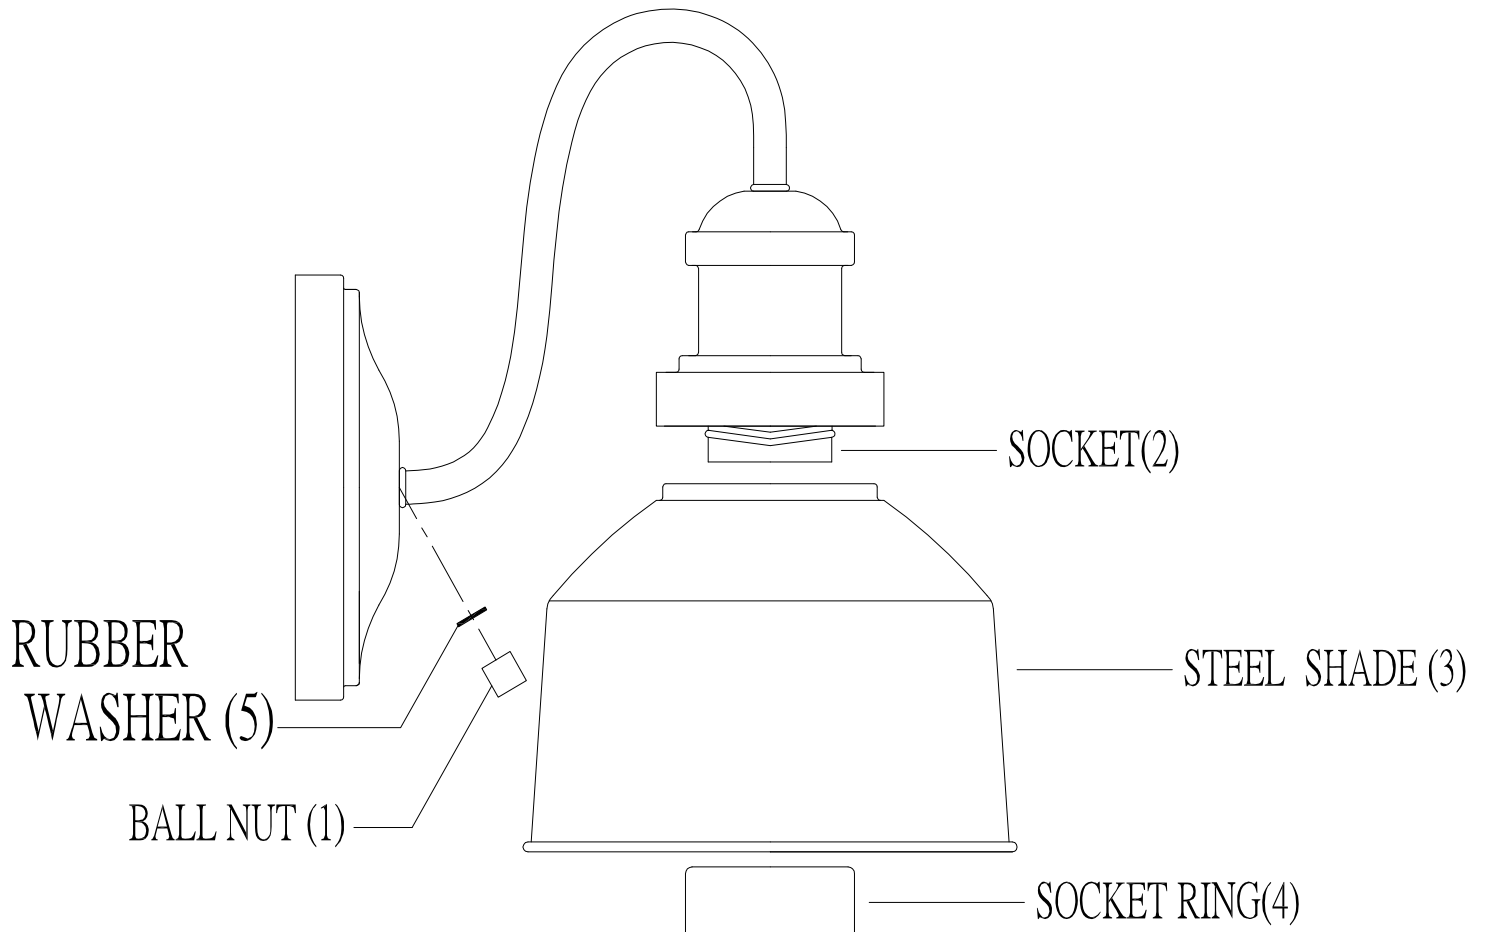

INSTALLATION INSTRUCTIONS

1. Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;
2. Install the steel shade (3) into the socket (2), then secure them with the socket ring (4).
3. Fixture is ready for lamping and installation.