


ITEM NO: M50047ORB
M50047BK

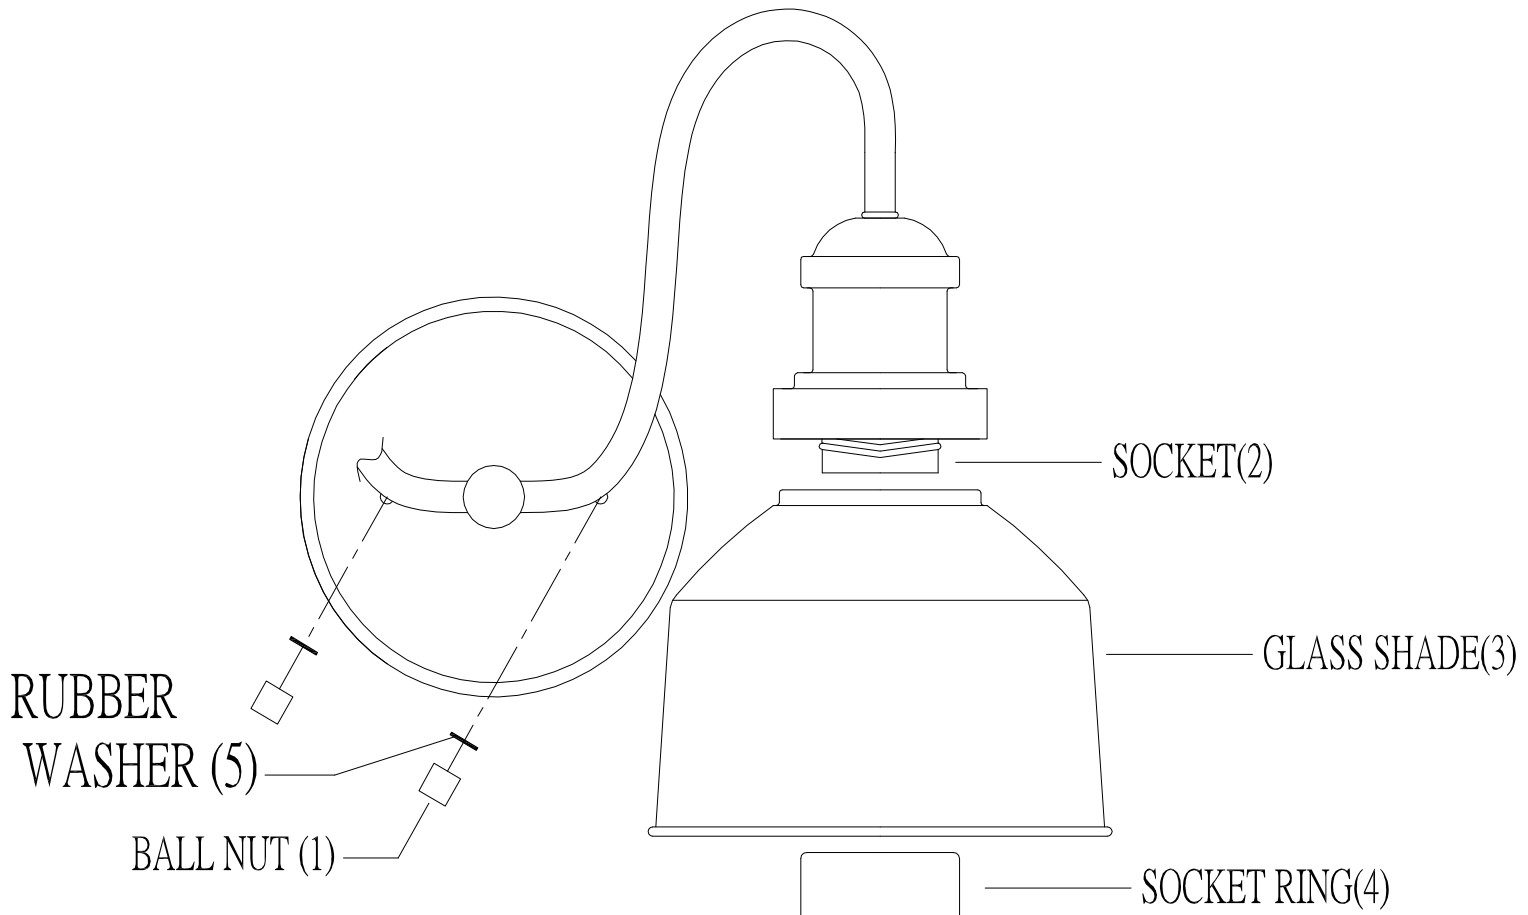

INSTALLATION INSTRUCTIONS

1. Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;
2. Install the steel shade (3) into the socket (2), then secure them with the socket ring (4).
3. Fixture is ready for lamping and installation.